


PIPEREP
PIPEREP
PIPEREP
PIPEREP
PIPEREP

PIPEREP T-ISS

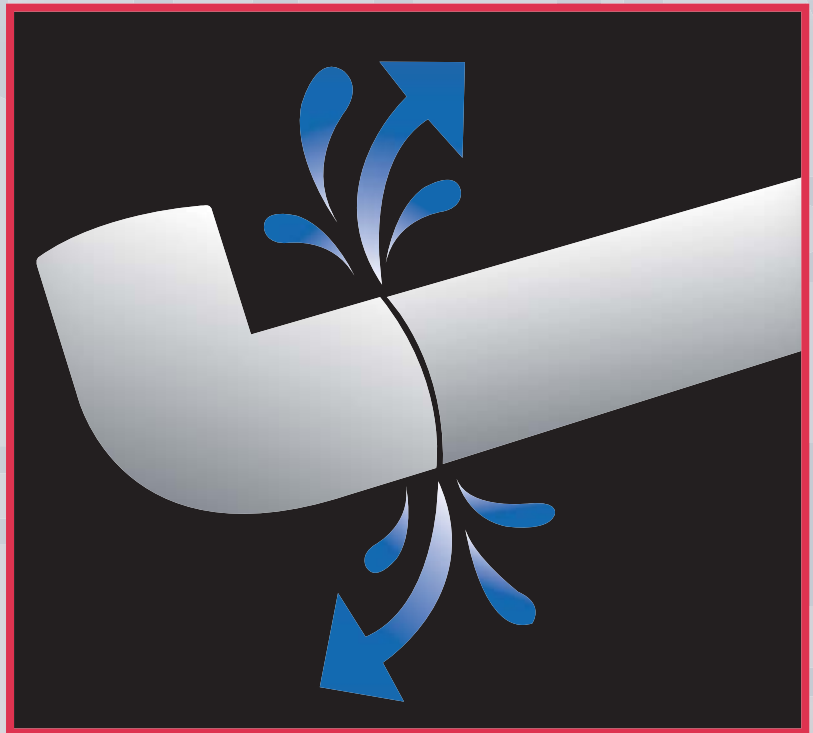

REPAIRTAPE FOR
CRACKED OR BROKEN PIPES
INCLUDING EPOXYSTICK




PIPEREP 2 = 5cm x 1,5m

PIPEREP 3 = 7,5cm x 2,7m

PIPEREP

PIPEREP

REPAIRTAPE FOR PIPES USE IN MARINE AND PROCESS INDUSTRY

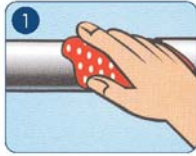

1 Clean and roughen area to be repaired.
Shut down pipes and hoses before repair.
A clean roughened surface results in a successful repair.




2 Pull a piece of the epoxystick, knead in your hand so that the 2 components mix.




3 Place the material in the hole.



4 Wear gloves. Open the package at a time in order to escape from causing moisture to cure the resin. To activate the set, soak in fresh or salt water for 3 seconds.

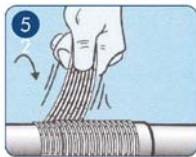

5 Application to damaged pipes:
Apply PIPEREP by very firmly wrapping the damaged area extending 2 inch (5.0 cm) beyond repair.

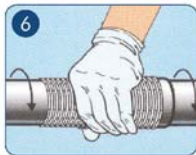

6 Continue to apply pressure by molding PIPEREP tape in direction of wrap until PIPEREP tape begins to set. If needed, cut excess PIPEREP tape with knife or scissors. Tool can be cleaned with alcohol or acetone.

Distribution by

T-ISS
www.t-iss.com

HOPERIL
www.hoperil.de